



- |   |   |   |  |   |
|---|---|---|--|---|
| 1 Engine compartment light switch         | 19 Horn                                     | 37 Blower on indicator (two brightness levels)      | 55 Windshield wiper light                        | 73 Trunk light switch   |
| 2 Engine compartment light - 5 W          | 20 Brake fluid level warning light switches | 38 Alternator warning light                         | 56 Windshield wiper switch                       | 74 Trunk light  |
| 3 Ignition distributor                    | 21 Voltage regulator                        | 39 Direction indicator light                        | 57 Ash tray light - 5 W                          | 75 Electric fuel pump   |
| 4 Coil                                    | 22 Horn relay                               | 40 Stop light switch                                | 58 Ash tray light switch                         | 76 Fuel level sender  |
| 5 Resistance (off during starting)        | 23 Cold start device relay                  | 41 Windshield washer switch - foot operated         | 59 Cigarette lighter                             | 77 Side marker lights, rear - 3 W                               |
| 6 Fuel cut-off solenoid                   | 24 Front directional indicators             | 42 Key reminder buzzer                              | 60 Hand throttle warning light switch            | 78 Rear direction indicators - 21 W                             |
| 7 Microswitch                             | 25 Headlamps Hi/Lo - Sealed beam            | 43 Safety belt buzzer                               | 61 Parking brake warning light switch            | 79 Parking and stop lights - emergency flashers - 5/21 W        |
| 8 Low oil pressure warning light switch   | 26 Side marker lights, front - 3 W          | 44 Direction indicator and emergency flasher unit   | 62 Courtesy light - 5 W                          | 80 Back up lights - 21 W  |
| 9 Back up light switch                    | 27 Safety belt device                       | 45 Low brake fluid / parking brake on warning light | 63 Courtesy light switch (in mirror)             | 81 License plate lights - 5 W                                   |
| 10 Oil pressure gauge sender              | 28 Glove compartment light                  | 46 Hand throttle warning light                      | 64 Ignition and starting switch                  | 82 Inertia switch   |
| 11 Coolant temperature sender             | 29 Glove compartment light switch           | 47 Fasten seat belts light                          | 65 Horn switch                                   | 83 Brake warning light relay                                    |
| 12 Low fuel pressure warning light switch | 30 Blower motor (two speed)                 | 48 Hazard light                                     | 66 Fuse boxes                                    | 84 Auxiliary breaker points                                     |
| 13 Vacuum switch                          | 31 Low oil pressure warning light           | 49 Emergency flasher switch                         | 67 Parking lights, headlamps and flashing switch | 85 Primary breaker points                                       |
| 14 Windshield wiper (two speed)           | 32 High beam on indicator                   | 50 Emergency flasher pushbutton warning light       | 68 Direction indicator switch                    | 86 Relay for ignition advance (on starting)                     |
| 15 Junction boxes and connectors          | 33 Low fuel pressure warning light          | 51 Heater control panel light                       | 69 Key reminder buzzer switch                    | 87 Catalyst overtemperature (Exh. Temp) warning light feed unit |
| 16 Alternator                             | 34 Parking lights on indicator              | 52 Blower switch                                    | 70 Courtesy light switch on door jams            | 88 Thermocouple for catalyst overtemperature warning light      |
| 17 Cold start device solenoid             | 35 Instrument lights                        | 53 Defroster light                                  | 71 Battery - 12 V / 60 Ah                        | 89 Catalyst overtemperature (Exh. Temp) warning light - 1.2 W   |
| 18 Starter                                | 36 Low fuel warning light                   | 54 Dimmer for center consol indicator lights        | 72 Belt switch (drivers side)                    |   |

# 1978 Alfa Romeo Spider Schematic